



MAKING YOUR DREAMS A REALITY

FITTING INSTRUCTIONS

Fitment of DB Killer for KTM Exhaust System

EXPS-0061






1) Remove the carbon end cap by removing the two button head bolts.



2) Remove End Cap completely.



3) Prepare the DB Killer for fitment by removing the cap head bolt.

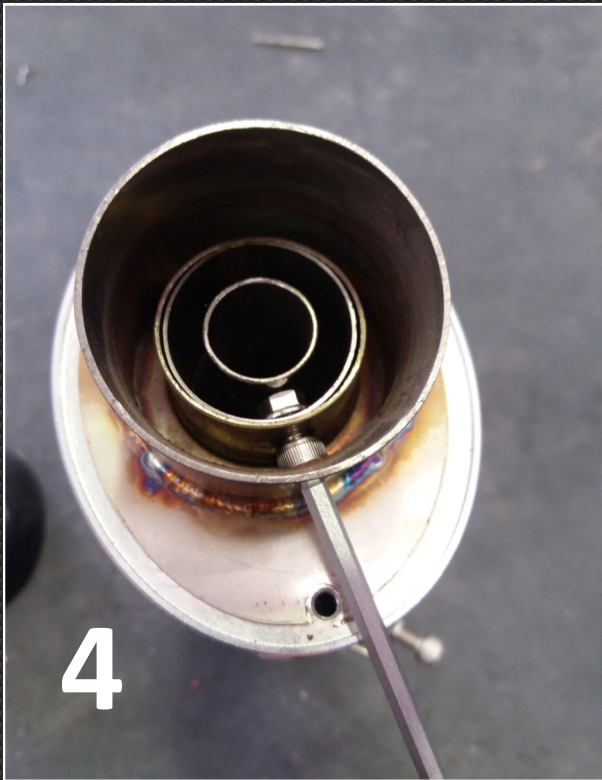

4) Drop the DB Killer into the end tube and hold in correct position to line up the holts for the cap head bolt. Fit bolt and tighten



6) Re-fit the carbon end cap and tighten



5) Smear some high temp sealant on the end of the two button head bolts.

The high temp sealant on the button head bolts is quite an important step in the process, as it helps to stop the bolts vibrating loose. Do not use Loctite as the heat in the silencer will melt the Loctite and serve very little purpose.