




MAKING YOUR DREAMS A REALITY

FITTING INSTRUCTIONS

Air duct Modifications for NSR150SP USD fork conversion

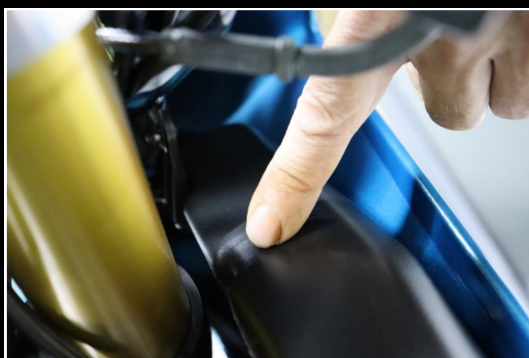

The NSR150SP standard forks have much more clearance than the USD forks fitting used in our conversion, and as such you will need to make a small modifications to the air ducts to give a little extra clearance. For this mod you will need a screw driver, some side cutters or a sharp knife and a 2mm drill.

1) Remove the screw that holds the plastic flap in position on the underside of the air duct.



2) Remove the tab from the air duct using the snippers or sharp knife. Please take extra caution if using a knife!



3) Shows the natural position of the inner cowl piece. Do not remove the tab from the flap.

4) Shows it bent out the way and you can see the air duct tab removed

The flap will be repositioned and secured out of the way.

As shown in the pictures, the tab on the flap will be no longer visible once re positioned and secured



5) Shows the new position. Here you can see from the underside, where the tab on the flap will be secured.



6) The hole position can be easily marked by holding the flap in the new position and using one of the provided screws to press down and leave a witness mark




7) Here you can see the small indent


8) Drill a 2mm hole using the indent as a guide.



9) Secure the flap with one of the screws provided.

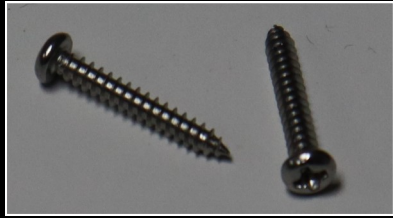

10) Finished job (repeat for other side)

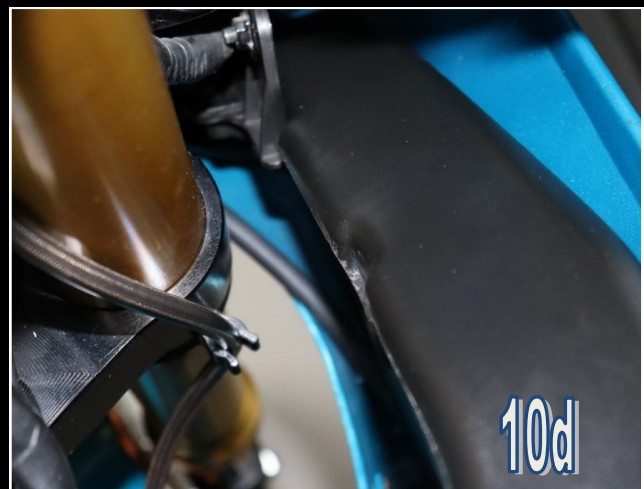

www.tyga-performance.com